CONFIGURAZIONE ROUTER TP-LINK

- 1. Collegare il router al PC tramite il cavo di rete, inserendo un'estremità in una porta gialla del TP-LINK e l'altra estremità nella porta Ethernet del PC.
- 2. Per impostare l'indirizzo IP al PC

Andare su "start" e scrivere sulla barra di ricerca la voce "ncpa.cpl"



Fare doppio clic sopra l'icona "Connessione alla rete locale (LAN)"



Cliccare sul tasto "proprietà"



Cliccare su "Protocollo internet versione 4 TCP/IPv4

Connetti tramite:		
🔮 Broadcom Net	Xtreme Gigabit Ethernet	
		Contract
1	It - I	Configura
La connessione utilizz	ta gli elementi seguenti:	
Condivisione	e file e stampanti per reti l	Microsoft 🔺
Protocollo In	ternet versione 6 (TCP/I	Pv6)
🗠 📥 Protocollo In	ternet versione 4 (TCP/I	Pv4)
E D	1.1 be bet	
Driver di 1/0	del maccino di individua	zione topologia liv
Installa	del mappino di individua III Disinstalla	zione topologia liv *
Installa	del macoina di individua III Disinstalla	Proprietà
Installa Descrizione TCP/IP. Protocollo	del mappino di individua III Disinstalla	zione topologia liv Proprietà
Installa Descrizione TCP/IP. Protocollo comunicazione tra	del macopino di individua III Disinstalla predefinito per le WAN diverse reti interconness	Proprietà che permette la e.
Installa Descrizione TCP/IP. Protocollo comunicazione tra	del macoino di individua III Disinstalla predefinito per le WAN diverse reti interconness	Proprietà che permette la e.
Anver di I/O Installa Descrizione TCP/IP. Protocollo comunicazione tra	del macoino di individua III Disinstalla predefinito per le WAN diverse reti interconness	Proprietà Proprietà che permette la e.
Anver di I/O Installa Descrizione TCP/IP. Protocollo comunicazione tra	del maccino di individue III Disinstalla predefinito per le WAN diverse reti interconness	Proprietà Proprietà

Mettere la spunta su "Ottieni automaticamente un indirizzo IP" e premere OK.



- 3. Aprire il browser e chiamare il link "tplinklogin.net"
 - "NB: Se comunque non riuscite ad entrare:

Nell'immagine poco sopra, cliccare su "Utilizza il seguente indirizzo IP" e inserire:

Indirizzo IP: 192.168.0.2 Subnet Mask: 255.255.255.0

Andare sul browser e digitare: 192.168.0.1 e premere INVIO. (se si attua questa procedura, ricordare alla fine di reinserire l'ottenimento automatico degli indirizzi IP e dei DNS sulla scheda di rete LAN)"

4. Inserire come nome utente "admin" e come password "admin"

5. Sulla sinistra si trovano i vari menù, andare sul menù "DHCP" – "DHCP Settings", mettere la spunta su "disable" e cliccare in fondo il tasto "SAVE"

rp-link [®]			300M Wireless N Router Model No. TL-WR841N / TL-WR841ND
stus DHCP Settings SS			DHCP Settings Help This device is set up by default as a DHCP (Dynamic
PS Work Trebess CP HCP Settings HCP Client List ddress Reservation Wording centry centry Centrol Cess Control Vanced Routing ndwidth Control AAC Binding namic DN S stem Tools	Disable D	2800 minutes, the default value is 120) (Optional) (Optional) (Optional)	 This device its set up by default as a DHCP (Dynamic Configuration Protocol) seture, which provides the T Configuration Protocol is that are connected to this device LAN. Other Server - Characteria and the PC share are connected to this device LAN. Other Server - Characteria and the PC share are connected to this device the server type of the Server you must have another DHCP server - characteria and the PC and the Server you must have another DHCP server - characteria and the PA deress to computer manualy. The IP Address pool. Taki de specifice the fast address if P Address Loss The IP Address Loss The IP

6. Nel menù "WIRELESS" – "WIRELESS settings" scrivere sulla barra "SSID" il nome della rete (PROGETTO EVO), e cliccare in fondo il tasto "SAVE"

11-WR841N ×				
→ C 192.168.0.254				9 B 🖓
pp 🕒 172.31.2.103 💥 Servizio	gratuito di S			
				300M Wireless N Router
P-LINK				Model No. TL-WR841N / TL-WR841ND
atus	100-00-00-00			Wireless Settings Help
Jick Setup	Wireless Settings			Wileless Settings help
25				Note: The operating distance or range of your wirele: connection varies significantly based on the physical placeme
twork	Wireless Network Name:	PROGETTO EVO	(Also called the SSID)	of the Router. For best results, place your Router.
Cicas	Region:	Italy •		 Near the center of the area in which your wirele stations will operate
ficeloss Security	Warning:	Ensure you select a correct country to con	nform local law.	In an elevated location such as a high shelf. Away from the potential sources of interference with
Finaless Security		incorrect settings may cause interference		 Away non-the potential sources of interference, such a PCs, microwaves, and cordless phones.
Viceless MAC Futering	Mada	Address sector of the address of the sector		 With the Antenna in the upright position. Away from large metal surfaces.
fireless Advanced	Channel Middle	Tibgh mixed •		Note: Failure to follow these guidelines can result in significa
CD	Channel Width:	Auto		performance degradation or inability to wirelessly connect to t Router
warding	Channel:	Auto •		Wireless Network Name - Enter a value of up to 32 characte
curity				The same Name (SSID) must be assigned to all wirele
rental Control				devices in your network.
cess Control		Enable Wireless Router Radio		specifies the region where the wireless function of the Rout
vanced Routing		Enable SSID Broadcast		can be used. It may be illegal to use the wireless function of t Router in a region other than one of those specified in this file
ndwidth Control		Enable WDS Bridging		If your country or region is not listed, please contact your loo operation of a second for assistance
& MAC Binding				Mode. Colect transmission mode according to your wirele
namic DNS		Save		devices.
tem Tools				Channel Width - The bandwidth of the wireless channel.
				Channel - This field determines which operating frequency v be used. It is not necessary to change the wireless chann unless you notice interference problems with another near access point. If you select auto, then AP will choose the be channel automatically.
				Enable Wireless Router Radio - The wireless radio of the Router can be enabled or disabled to allow wireless station access. If enabled, the wireless stations will be able to acce the Router. Otherwise, wireless stations will not be able access the Router.
				Enable SSID Broadcast - If you select the Enable SS Broadcast checkbox, the wireless router will broadcast name (SSID) on the air.
				Enable WDS Bridging - You can select this to enable WD Bridging, with this function, the Router can bridge two or mo WLANs. NOTE: If this checkbox is selected, you had bett make sure the following settings are correct.
8.0.254/userRpm/WlanSecurityRpm	a.htm			SSID to be bridged) - The SSID of the AP your Porter is go

 Nel menù "WIRELESS"-"WIRELESS Security" Mettere la spunta su WPA/WPA2 – Personal(Recommended), sulla barra "WIRELESS PASSWORD", inserire la password "wireless01" e cliccare in fondo il tasto "SAVE"

A C D 192 1680 3	254			9 E. J
Ann C 172.31.2.103	vizio gratuito di S			1 (8)
opp [] 1/2312103 [] 360	vizio gratorito di S			
TP-LINK	C			300M Wireless N Router
				Model No. TL-WR841N / TL-WR841ND
				*
atus				
lick Setup	Wireless Security			Wireless Security Help
PS				You can select one of the following security options:
twork	Disable Security			Disable Security - The wireless security function car
reless	U Disuble Security			enabled or disabled. If disabled, the wireless stations be able to connect this device without encryption.
/ireless Settings				recommended strongly that you choose one of follow options to enable security
lireless Security	WPA/WPA2 - Pers	wood poir		 WPA/WPA2 - Personal - Select WPA based on p shared passiblese
Vireless MAC Filtering	version:	WPA2-PSK ¥		• WPA/WPA2 - Enterprise - Select WPA based
fireless Advanced	Encryption:	AES 🔻		WEP - Select 802.11 WEP security.
ireless Statistics	Wireless Password:	wireless01		Each security option has its own settings as described follow
СР		(You can enter ASCII characters between 8 characters between 8 and 64.)	and 63 of Hexadecimal	WPA/WPA2 - Personal
warding	Group Key Update Period:	0 Seconds		Version - You can select one of following versions.
curity		(Keep it default if you are not sure, minimum	n is 30, 0 means no update)	Automatic - Select WPA-PSK or WPA2-
rental Control	WPA/WPA2 - Enter	prise		automatically based on the wireless station's capal
cess Control	Version:	Automatic •		WPA-PSK - Pre-shared key of WPA.
vanced Routing	Encryption:	Automatic •		WPA2-PSK - Pre-snared key of WPA2.
MAC Dinding	Radius Server IP:			Encryption - You can select either Automatic, or I KIP or A
amic DNS	Radius Port:	1812 (1-65535, 0 stands for defau	ilt port 1812)	Wireless Password - You can enter ASCII or Hexadec characters. For Hexadecimal, the length should be betwee
tem Tools	Radius Password:			and 64 characters; for ASCII, the length should be betwee and 63 characters.
	Group Key Update Period:	0 (in second, minimum is	: 30, 0 means no update)	Group Key Undate Period - Specify the group key up
	. WEP	<u>[-</u>]		interval in seconds. The value can be either 0 or at least
	Type	Automatic		WDA WDA 2 Enterprise
	WED Key Formati	Haundasimal		Werking You are extend and of fellowing werking
	WEP Ney Format:	WED Kow	Koy Tuno	version - rou can select one or following versions,
	Key 1:	WET Ney	Disabled ¥	 Automatic - Select WPA or WPA2 automatically ba on the wireless station's capability and request.
	Key 2		Disabled *	WPA - WI-FI Protected Access. WPA2 - WPA version 2.
	Key 2:		Disabled •	Encryption - You can select either Automatic, or TKIP or A
	Key J:		Disabled •	Radius Server IP - Enter the IP address of the Radius Server
	Key 4:		Disabled	Radius Port - Enter the port that radius service used
				Radius Password - Enter the password for the Radius Serve
		Save		Crew Key Hedate Desid. Crewit, the area her and

8. <u>SE</u> nel menù c'è una voce "WPS" bisogna entrarci e cliccare sul tasto "DISABLE WPS" e cliccare in fondo il tasto "SAVE", se non c'è si puo' saltare questo passaggio.



 Nel menù "NETWORK" – "LAN" sulla barra "IP ADDRESS" inserire l'indirizzo IP "192.168.0.254", sulla barra "SUBNET MASK" selezionare la subnet "255.255.255.0" e cliccare in fondo il tasto "SAVE"

TL-WR841N ×		- 6 ×
← → C 🗋 192.168.0.254		7 등 ☆
App 📋 172.31.2.103 🖰 Servizio gratuito di S		
TP-LINK		300M Wireless N Router
		MULLE NO. 12-TROTINT 12-TROTIND
Ouick Solup		LAN Help
wps		You can configure the IP parameters of LAN on this page
Network		MAC Address - The physical address of the LAN parts
-WAN	AC Address: E8-DE-27-BB-AA-56	seen from the LAN. The value cannot be changed.
- MAC Clone	IP Address: 192.168.0.254	 IP Address - Enter the IP address of your Router in dotti decimal notation (factory default - 192.168.0.1).
-LAN SI	abnet Mask: 255.255.255.0 •	 Subnet Mask - An address code that determines the size the network. Usually it is 255 255 255 0
Wireless	GMP Proxy: Enable *	 IGMP Proxy - If you want to watch TV through IGN
DHCP	Note: IGMP(Internet Group Management Protocol) works for	IPTV multicast
Forwarding	IGMP snooping.	Isabled option and Note:
Security		 If you change the LAN IP address, you must use the new address to login to the Router.
Parental Control	Save	 If the new LAN IP address you set is not in the same sub with the previous one, the IP Address peak in the Dill
Access Control	Gave	server will be configured automatically, but the Vint
Advanced Routing		Server and DMZ Host will not take effect until they are configured
andwidth Control		Click the Save button to save your settings.
P & MAC Binding		
Dynamic DNS		
System Tools		
168.0.254/userRpm/NetworkCfgRpm.htm		